 


KITCHEN HOOD SAVO

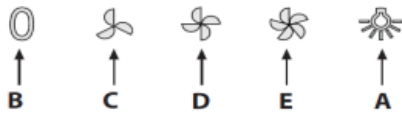

- **Button B – Power on and off**
- **Buttons C, D, and E – Select motor speed**
- **Button A – Lights on and off**

CLEANING THE KITCHEN HOOD: Clean at least every two months to prevent fire hazards.

CLEANING THE EXTERIOR: Use a cloth dampened with lukewarm water and mild detergent (for painted kitchen hoods and canopies). For stainless steel kitchen hoods or canopies, use special cleaning products designed for them.

CLEANING THE INTERIOR: Use a cloth (or brush) dampened with ethyl alcohol. Do not use abrasive or corrosive products (e.g., metal sponges, hard brushes, strong detergents, etc.).

CLEANING THE GREASE FILTERS (approximate usage time: 30 operating hours): Remove the grease filter by pressing the filter's locking latch backward towards the handle and pulling the filter out from below. Clean manually or in the dishwasher with mild detergent. If the filter is cleaned in the dishwasher, it may discolor, but this does not affect its functionality.

REPLACING THE ACTIVATED CARBON FILTER (approximate usage time: 120 operating hours): The lifespan of the activated carbon filter depends significantly on the type of food prepared. If you notice reduced filtering capability, it is advisable to replace the filter even before the recommended 120-hour period. A greasy grease filter shortens the lifespan of the activated carbon filter as it begins to let grease through. Remove the activated carbon filter and replace it with a new one.

REPLACING THE LIGHT BULBS

The appliance is equipped with two replaceable LED lamps (E14). Follow general safety instructions when replacing a bulb. Disconnect the appliance from the electrical network before starting. Carefully remove the lamp cover using a small screwdriver.

